

Find the antennae wire hanging down from the rear of the motor, within about 2 inches of the antennae wire you will find a recessed area with 3 push buttons.

The LEFT button is the Less Force button  
The MIDDLE button is the More Force button  
The RIGHT button is the Set Code button

To re-code a transmitter press and release the FAR RIGHT button and listen for one click

Press the TRANSMITTER button once and listen for 2 clicks of the motor

Press the TRANSMITTER button once and listen for 3 clicks of the motor

Press the TRANSMITTER button once and listen for 4 clicks of the motor

Press the TRANSMITTER button once and listen for 5 clicks of the motor

Wait 60 seconds and the motor will click once more - you are now done, press the transmitter to test

To reset the FORCE press LEFT BUTTON 5 times to remove all the limit settings

Press the MIDDLE BUTTON 2 times then run the operator through a complete up and down cycle

If the door won't go down fully press the MIDDLE BUTTON once more and run through a complete cycle

Repeat the above step to increase the force more- PLEASE NOTE IT IS IMPORTANT TO HAVE ENOUGH BUT NOT TOO MUCH FORCE

These models will use one of the following transmitter frequencies 312 - 340 - 360 - 380 - 390. Look at the white label underneath the recessed opening to find the frequency number.

## Model 455,550,555,556,656 Transmitter Coding

